



INSTALLATION INSTRUCTIONS INSTRUCCIONES DE MONTAJE



Safety instructions / Instrucciones de seguridad

Precautions / Precauciones:

It is important that you read, fully understand and observe the following safety instructions as well as the installation instructions.
Careless or improper handling may cause injury or property damage.



*Es importante que lea, comprenda completamente y respete las siguientes instrucciones de seguridad, así como las instrucciones de montaje.
El manejo descuidado o inadecuado puede causar lesiones o daños a la propiedad.*

Good footwear is very important. Wear sturdy boots with nonslip soles. Steel-toed safety boots are recommended.



Un buen calzado es muy importante. Póngase botas gruesas con suela antideslizante. Recomendamos las botas de seguridad con puntera de acero.

Knee-protection is recommended!



¡Recomendamos la protección de rodilla!

Always wear gloves when handling and installing the mats. Heavy-duty, nonslip gloves improve your grip and help to protect your hands.



Siempre use guantes cuando maneje y monte los pisos de goma. Los guantes gruesos y antideslizantes mejoran el manejo y ayudan a proteger las manos.

During installation / durante el montaje:

Do not stand or work under suspended load (pallet)!



¡No se pare ni trabaje bajo carga suspendida (palet)!

- Do not underestimate the weight of the mats. Improper handling may cause injury.
- Only use the recommended tools.
- Observe the safety instructions of the tools' manufacturers.
- Caution when cutting: blade may move quickly through the rubber mat. Be sure you are cutting away from your body.
- Pallets can be broken! Watch out for splinters and / or nails!
- Take care to remove edge protectors or other small parts of packaging from cow feeding areas!



- *No subestime el peso de los pisos de goma. El manejo inadecuado puede causar lesiones.*
- *Solo use las herramientas recomendadas.*
- *Respete las instrucciones de seguridad de los fabricantes de herramientas.*
- *Tenga cuidado al cortar: la cuchilla puede moverse rápidamente a través del piso de goma. Asegúrese de estar cortando lejos de su cuerpo.*
- *¡Los palets se pueden romper! ¡Cuidado con las astillas y / o los clavos!*
- *¡Tenga cuidado de quitar los protectores de bordes u otras partes pequeñas de los envases de las áreas de alimentación de las vacas!*

After installing / después del montaje:



Caution!
Cows will be more active!

*¡Cuidado!
¡Las vacas podrían ser más activas!*



Watch out for uneven edges if the floor is only partially covered.

Tenga cuidado con los desniveles en los bordes si el piso está cubierto solo parcialmente.



Residues on the rubber may cause slippery condition while and shortly after installing!

¡Los residuos sobre la goma pueden causar condiciones resbalosas durante y poco después del montaje!

KRAIBURG SoftBed LongLine

Requirements:




concrete area:

- minimum 4" (10 cm) thick
- no holes
- level off uneven surfaces

mats:

Installation Temperature:
minimum 41°F (5°C) to maximum 86°F (30°C) (be sure internal temperature of mats falls within above range)




86°F!
41°F!




for animal hygiene some bedding is necessary to absorb moisture

You will need this:


measuring:

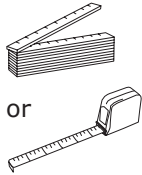


marking:

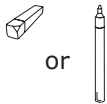

cutting:

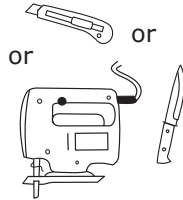


drilling and installing:

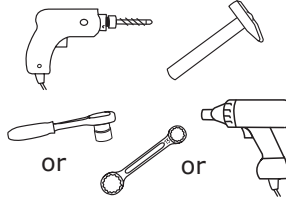

fastening components:

- 1/4" x 3" steel anchors
 - 1/4" x 4" steel anchors
 - 1-1/2" fender washer
- (or fastening components with at least the same resistance and durability)


1 Lay out and fasten sealing strips at the rear edge

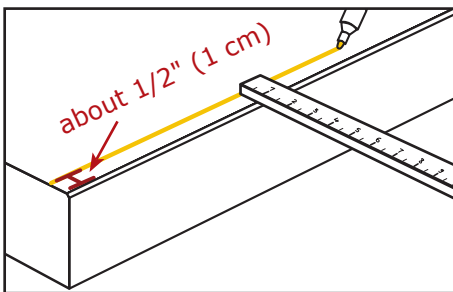



mark approx. 1/2" (1 cm) distance from the rear concrete edge



tip:
use a chalk line!

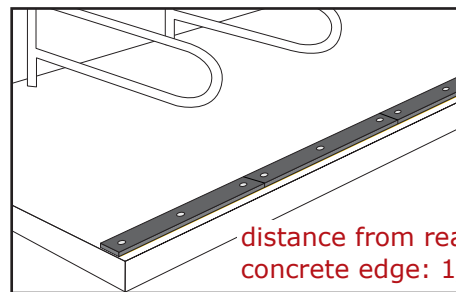


lay out thin, wide sealing strips along the marking

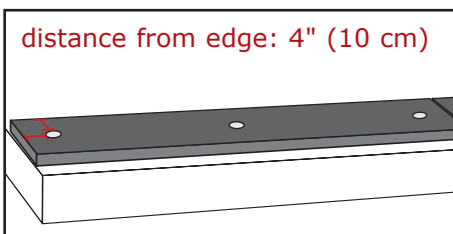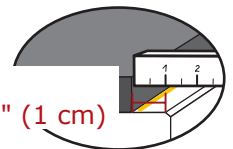


Install anchors every 12" (30cm) to 16" (40 cm)

! 1/4" x 3" steel anchor and 1-1/2" fender washer

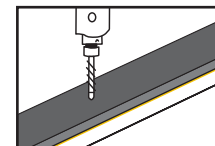


drill

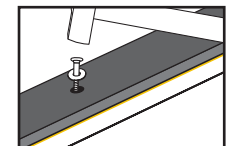

pound in anchors and washers

2 Lay out side sealing strips - foam - front sealing strips


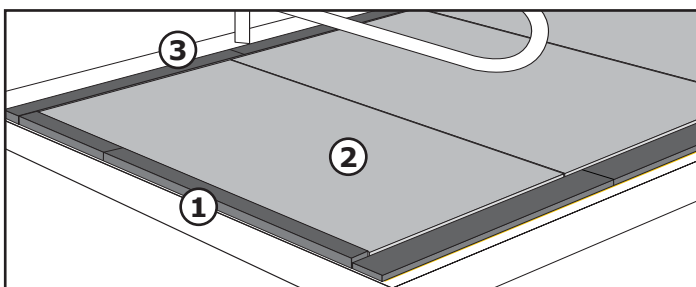


- 1 lay out thick, narrow sealing strips along the side edges - shorten sealing strips accordingly
- 2 place foam along rear and side sealing strips
- 3 lay thick, narrow front sealing strips loosely, edge to edge against foam


Appropriate installation may differ due to local conditions. Therefore the manufacturer is not liable for installation!



3 Roll out rubber cover

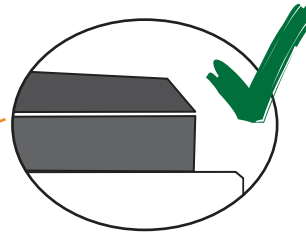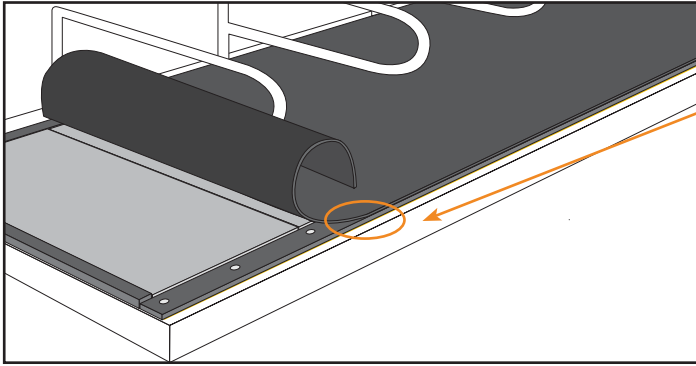

flush with the rear
sealing strip

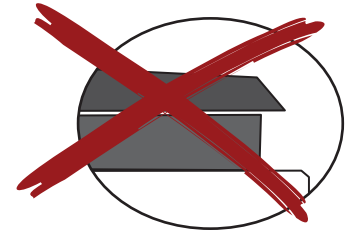


rubber cover
may not overlap
rearwards




let the rolled out rubber cover rest in the barn climate for
at least 12 hours (-> to relieve tension)

4 Fastening


i start in the middle of the rubber cover and alternately work towards the right and to the left

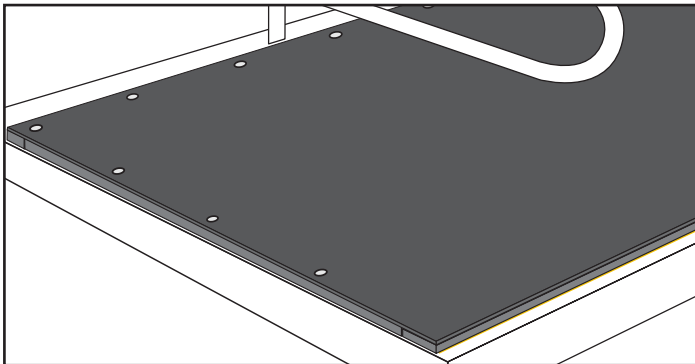

fasten through rubber cover and sealing strips **at the front and side edge**

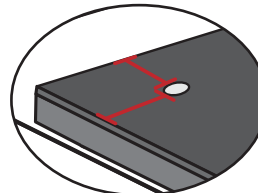


distance from
edge: about 1"
(2.5 cm)

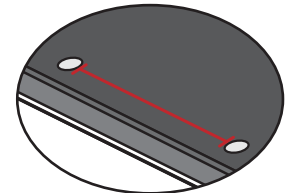


distance between
fastenings:
16" (40 cm) or less



1/4" x 4" steel anchors

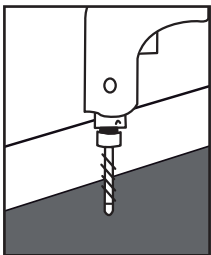

drill

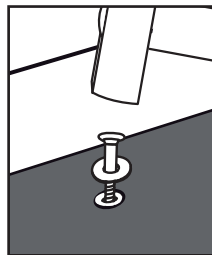

pound in anchors and washers until
they are seated firmly and
are slightly countersunk

Appropriate installation may differ due to local conditions.
Therefore the manufacturer is not liable for installation!



KRAIBURG SoftBed Longine - US - 2/2019 - I